


Exploded View

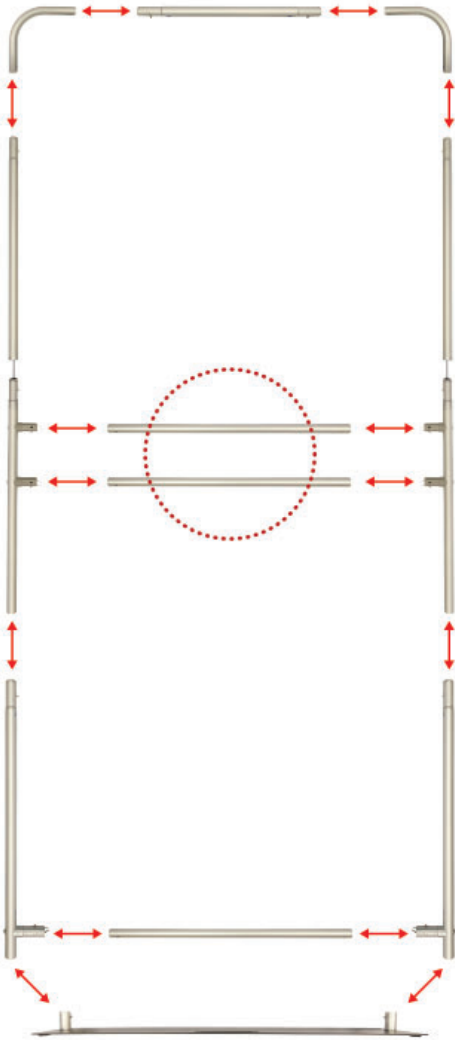

Be sure to orient the tubes such that the top has one hole, and the bottom has two holes pointing outwards.



Step 1



To attached the poles, first locate poles with corresponding numbers. Press down on the snap button to slide the tubes together. To disassemble, press down on the snap button, and pull the poles apart.

Step 2



Attached the feet as seen on the picture reference above. Press down on the snap button before sliding the poles together.

Step 3



Pull the graphic over the display from the top. Tug down on it until it reaches the base.

Step 4



Zip the graphic at the bottom.

Step 5



After locating the three holes present in both graphic and tubes. Insert the screws accordingly to support the hand sanitation hardware. Leave a small gap between the display and screws.

Step 6



Slot the hand sanitation hardware onto the display. Slide down after socketing the screws to lock in position.